

Instructions for fitting the bayonet filters in HALF MASKS

MEDOPAIR I and II




100%
MADE IN
EUROPE

The bayonet filter connection system is safe and easy to fit.

To make it easier for you, there are marks on the filter and half masks to help you fit them correctly.

MEDOPAIR I

MEDOPAIR II

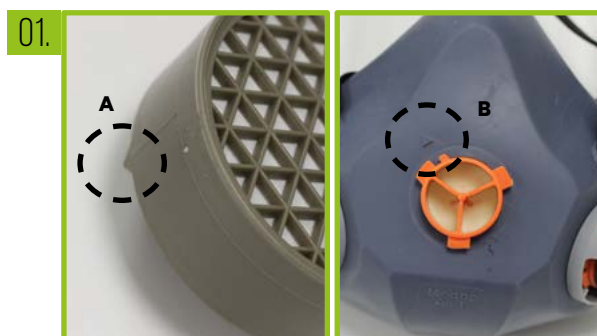

Step 1. Look at the triangular mark on the filter (A) and the mark on the MedopAir I (B) and MedopAir II (C and D) half masks.



Step 2. Fit the filter by bringing the triangular mark on the filter towards the mark(s) on the half mask. Once the filter is in place, twist it clockwise until you hear it click into place.



Step 3. The filters are now correctly fitted, ready to be used safely.