



Medop Vision



Respiratory protection: mask

Description and composition:

Manufactured in rubber, with a polycarbonate visor with great resistance to impacts and radiant heat.

Provides wide visibility.

Has a strap that allows it to be hung from the neck when resting or stopping work. Adapts to all types of face, obtaining a perfect fit, without compression.


Has one inhalation valve and two exhalation valves. Circulating air valves guarantee fog-free vision.

Visor with two internal anti-fogging valves.

Class III PPE.

NOTES: the components of this article are not sold separately.

Weight: 573 g

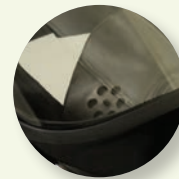

Visor with two internal anti-fogging valves

Class III

Class III PPE



Wide visibility visor

Ref.	Product
911.807	Medop total vision mask
901.127	Replaceable visor
907.090	Connector

Filters available:

Particles	P3 R
Gases and vapours	A2, B2
Multiple	AB2, ABEK2
Combined	A2P3R, B2P3R, A2B2P3R, REACTOR HgP3R, A2B2E2K2P3R

Complies with parameters established in EN 136:98

Number of filter holders	1	
Number of exhalation valves	2	
Number of inhalation valves	1	
CO2 content (%)	<1%	
Resistance to respiration (mbar)	≤0.5	
To continual-flow inhalation	At 30 l/min	≤1.5
	At 95 l/min	≤2.5
	At 160 l/min	≤3.0
To continual-flow exhalation at 160 l/min	≤3.0	

Respiratory protection: half masks

Standard and certification	EN 136:98 CL 3
Applications	Environments with particle or gas contaminants. Do not use if the contaminant concentration exceeds 50 times the Permissible Exposure Limit. Sectors: DIY, painting, mining, construction, woodworking, chemistry and laboratory, textile, gardening, metallurgy, etc.
Conservation Storage - Expiry	Store in its case in a cool, well ventilated place, avoiding humidity, dirt and dust.
Directions Use	It is advisable to store the mask in a dust-free cupboard, protected from light and chemical vapours as well as from heat. It is advisable to clean after each use (except the filters) using soap and water. Air dry. Periodically, depending on degree of use, disinfect the product using a wide-spectrum antibacterial agent. The mask must be disassembled for cleaning or disinfection.
Presentation	911.807 - Medopvision: 1 unit per box and 10 units per carton. 901.127 - Visor: 1 unit per box and 100 units per carton. 907.080 - Connector: 20 unit per box and 200 units per carton. Measurements: 227 x 122 x 171.2 mm
Bar code	GTIN-13: 8423173098698 GTIN-14: 18423173098695 GTIN-13: 8423173098711 GTIN-14: 48423173098719 GTIN-13: 8423173135577 GTIN-14: 58423173135572

